

3+ Menu Servicing

Interim Service
£119

Major Service
£179

3+ Menu Servicing

Interim Service
£119

Major Service
£179

Engine Bay

- ▶ Check for engine oil leaks
- ▶ Check engine oil level and condition prior to service
- ▶ Drain engine oil and refill (special or synthetic oils subject to additional charge)
- ▶ Replace oil filter
- ▶ Check oil cooler for leaks
- ▶ Check condition of engine mountings
- ▶ Check condition of manifolds
- ▶ Visual check of radiator condition, security and leaks
- ▶ Check condition of coolant expansion bottle, cap and hoses for security and leaks
- ▶ Top up coolant level
- ▶ Check electric cooling fan for operation (where applicable)
- ▶ Check security of air filter box and condition of filter
- ▶ Check security of air filter box and replace filter
- ▶ Visual check of external auxiliary drive belts
- ▶ Check and record antifreeze strength

Fuel

- ▶ Check fuel cap and seal condition and security
- ▶ Check fuel cap release system (where applicable)
- ▶ Check condition and security of fuel lines and hoses
- ▶ Check condition of fuel filter

Clutch and Drive Line

- ▶ Check clutch operation
- ▶ Check clutch fluid level (where applicable)
- ▶ Check clutch operation and top up hydraulic fluid (where applicable)
- ▶ Check driveshaft gaiters for security and leaks
- ▶ Check propshaft/driveshaft/joints for security
- ▶ Check transaxle/axle oil level (where applicable)
- ▶ Check transmission oil level (where applicable)

Steering and Suspension

- ▶ Check power steering fluid level
- ▶ Check and top up power steering fluid level
- ▶ Check security and condition of hydraulic hoses
- ▶ Check steering/suspension components for wear and corrosion
- ▶ Check steering rack gaiter condition
- ▶ Check wheel bearings for excessive play or noise
- ▶ Check condition of all steering and suspension ball joints
- ▶ Check shock absorber condition

Electrical Systems

- ▶ Check operation of exterior lights
- ▶ Check operation of front headlight level system (where applicable)
- ▶ Check operation of ignition switch and steering lock
- ▶ Check ignition warning lights
- ▶ Check operation of warning lights/gauges
- ▶ Check indicator self cancelling system
- ▶ Check operation of interior blower (all speeds)
- ▶ Check air-conditioning performance
- ▶ Check operation of horn
- ▶ Check diesel cold start system indicator (where applicable)
- ▶ Check battery and terminal security
- ▶ Top up battery (where applicable)
- ▶ Check condition and security of HT leads

- ▶ Check external condition of distributor cap (where applicable)
- ▶ Test effectiveness of starter motor
- ▶ Check function of window operation
- ▶ Check auxiliary socket
- ▶ Check vehicle entry system
- ▶ Check alternator condition charging rate

Exhaust

- ▶ Check security and condition of the exhaust system
- ▶ Visual check for excessive exhaust smoke

Brakes

- ▶ Check brake linings for wear or damage (road wheels removed)
- ▶ Inspect condition of rear brake shoes (where applicable)
- ▶ Inspect operation and condition of wheel cylinders (where applicable)
- ▶ Check brake callipers for leaks and security
- ▶ Visually check brake hydraulic system, pipes and hoses for any leaks, chafing and corrosion
- ▶ Check park brake operation and security of cables
- ▶ Check condition of brake discs/drums
- ▶ Check brake fluid level
- ▶ Check and top up brake fluid level
- ▶ Check brake servo operation
- ▶ Check ABS warning light for correct operation (if applicable)
- ▶ Check condition and boiling point of brake fluid

Wheels/Tyres

- ▶ Remove road wheels
- ▶ Check tyres for correct size, load and speed rating
- ▶ Check tyre condition and tread depth (spare when applicable)
- ▶ Check and adjust tyre pressures (including spare)
- ▶ Torque wheels nuts to manufacturer specification

Driver's View

- ▶ Check condition and operation of windscreen wipers
- ▶ Check condition and operation of rear wiper
- ▶ Check windscreen washer operation and top up reservoir (water)
- ▶ Check windscreen washer operation and top up reservoir (screen wash)
- ▶ Check condition of front windscreen glass
- ▶ Check condition and security of external and rear view mirrors

General

- ▶ Reset vehicle service light where applicable/subject to data & tooling availability
- ▶ Check condition and security of number plates
- ▶ Carry out road test
- ▶ Complete service record
- ▶ Check and lubricate bonnet catch mechanism

Interior

- ▶ Check condition of cabin filter
- ▶ Check operation of boot release and struts
- ▶ Check security of seat and adjuster operation
- ▶ Check operation of bonnet release
- ▶ Check condition and security of seat belts (if accessible)
- ▶ Check condition and security of door straps and hinges